

Pan, Tilt, and Zoom

aim

Pan, Tilt and Zoom the camera to obtain a proper view of the subjects under study.

prerequisites

- Your user role allows session recording (Technician, Administrator, or Trainer).
- You have opened a location.

See [Select locations for recording](#)

- The camera can Pan, Tilt, and Zoom. Ask your colleague who manages the Viso set-up whether this is the case.

See [Select locations for recording](#)

procedure

1. Open the Viso interface.

See [Select locations for recording](#)

2. Hover the mouse over the PTZ button at the bottom of the


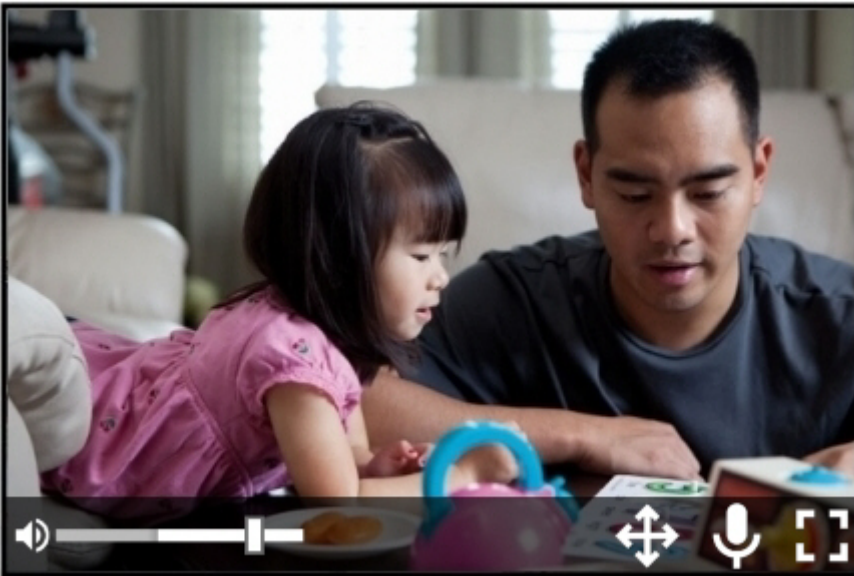


image.

at the bottom of the

3. Click the PTZ button to enable or disable PTZ control.

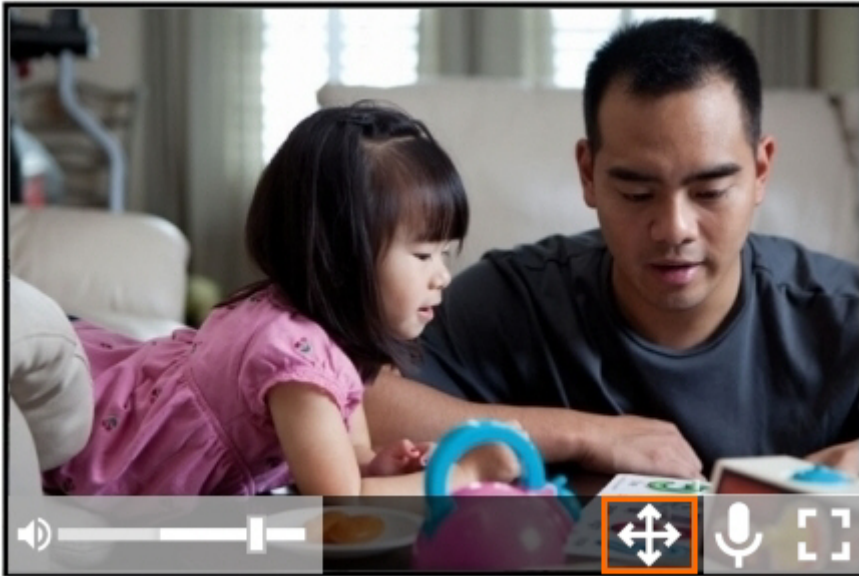

- PTZ control appears in the middle of the image and your mouse pointer becomes a small point. Click the camera image and keep your left mouse button pressed to control the camera. The camera image moves in the direction of the point. The further away from the PTZ control you click, the faster the camera moves.



- Zoom in and out with your mouse wheel.

See also [Save PTZ presets](#)

NOTE See [Record sessions](#) in [Keyboard shortcuts](#) how to manage the PTZ menu with your keyboard.

Revision #6

Created 15 January 2024 10:38:44

Updated 11 March 2024 13:26:37